

TRI-BAND BASE STATION ANTENNA MODEL: TS-10 (A/B)

Specifications

GAIN 3.5 dBi (6M) / 6.2 dBi (2M) / 8.6 dBi (70 cm) better than quarter

wave antenna+

VSWR Less than 1.5:1₽

FREQUENCY RANGE 52MHz (6 M) / 146MHz (2 M) / 435MHz (70 cm) (TS-10A)

52MHz (6 M) / 146MHz (2 M) / 445MHz (70 cm) (TS-10B)

POLARIZATION Vertical

IMPEDANCE 50 Ohm

POWER CAPACITY 200 Watts

CONNECTOR SO-239

✓

Assembly

 Refer to drawing (rear side of this instruction). Install upper radiator element (part #13) onto lower radiator element (part #15) by inserting element joint (part #14) fully onto lower radiator element and tightening set screw (part #16) securely with wrench (part #8).

- Slide upper outer tube (part #1) into lower outer tube (part #4). Thread upper outer tube joint (part #2) onto lower outer tube joint (part #3) and tighten securely.
- 3. Put the locking nut and washer onto the ground plane radials, then screw the three radials (part #5) into threaded holes on the metal antenna base (part #6) and tighten them by fingers. Secure the radials by tightening locking nuts with wrench.

The radial #19 is for 52MHz adjustment. Please see following drawing to adjust.

✓ 70CM

✓ →


- 4. Secure support pipe (part #10) to mounting pole (not included) in desired location using brackets (part #12), u-bolts (part #11), locking screws (part #7), lock washers (part #8), and either self locking nuts or nuts (part #9) and lock washers (part #8) supplied. Tighten securely with wrench (not included).
- 5. Run up the cable from radio through supporting pipe (part #10) and screw PL-259 on cable end tightly onto SO-239 connector at the bottom of antenna. Assemble antenna into support pipe with open threaded hole turned so that it will align with hole on support pipe for locking screw. Screw the locking screw (part #7) into hole and tighten it securely with wrench or screw driver.

Adjustment-

No adjustment is necessary. Your TS-10A (or TS-10B) is pre-aligned at the factory for 52MHz / 146 MHz / 435MHz or 52MHz / 146 MHz / 445MHz &

MADE IN TAIWAN.

TS-10(A/B) PARTS LIST AND ASSEMBLY DRAWING.

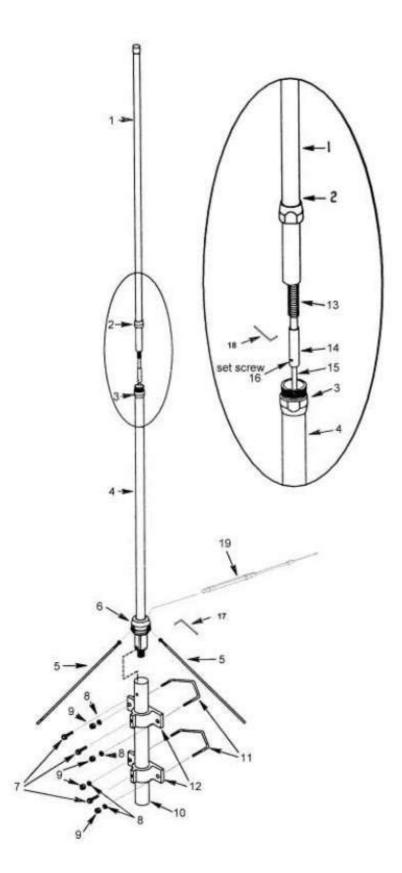

PARTS LIST

NO	DESCRIPTION	Q'TY
1	UPPER OUTER TUBE	1
2	UPPER OUTER TUBE JOINT	1
3	LOWER OUTER TUBE JOINT	1
4	LOWER OUTER TUBE	1
5	RADIALS & NUT, SPRING WASHER	2
6	METAL ANTENNA BASE	1
7	LOCKING SCREW	3
8	LOCKING WASHER	4
9	NUT	4
10	SUPPORTING PIPE	1
11	U-BOLT	2
12	BRACKET	2
13	UPPER RADIATOR ELEMENT	1
14	ELEMENT JOINT	1
15	LOWER RADIATOR ELEMENT	1
16	SET SCREW	1
17	WRENCH (LARGER ONE)	1
18	WRENCH (SMALLER ONE)	1
19	ADJ. RADIAL (52MHz USE ONLY)	1